


# CHANGING THE SURE-T® INFUSION SET: MINIMED® 630G INSULIN PUMP

## START HERE:

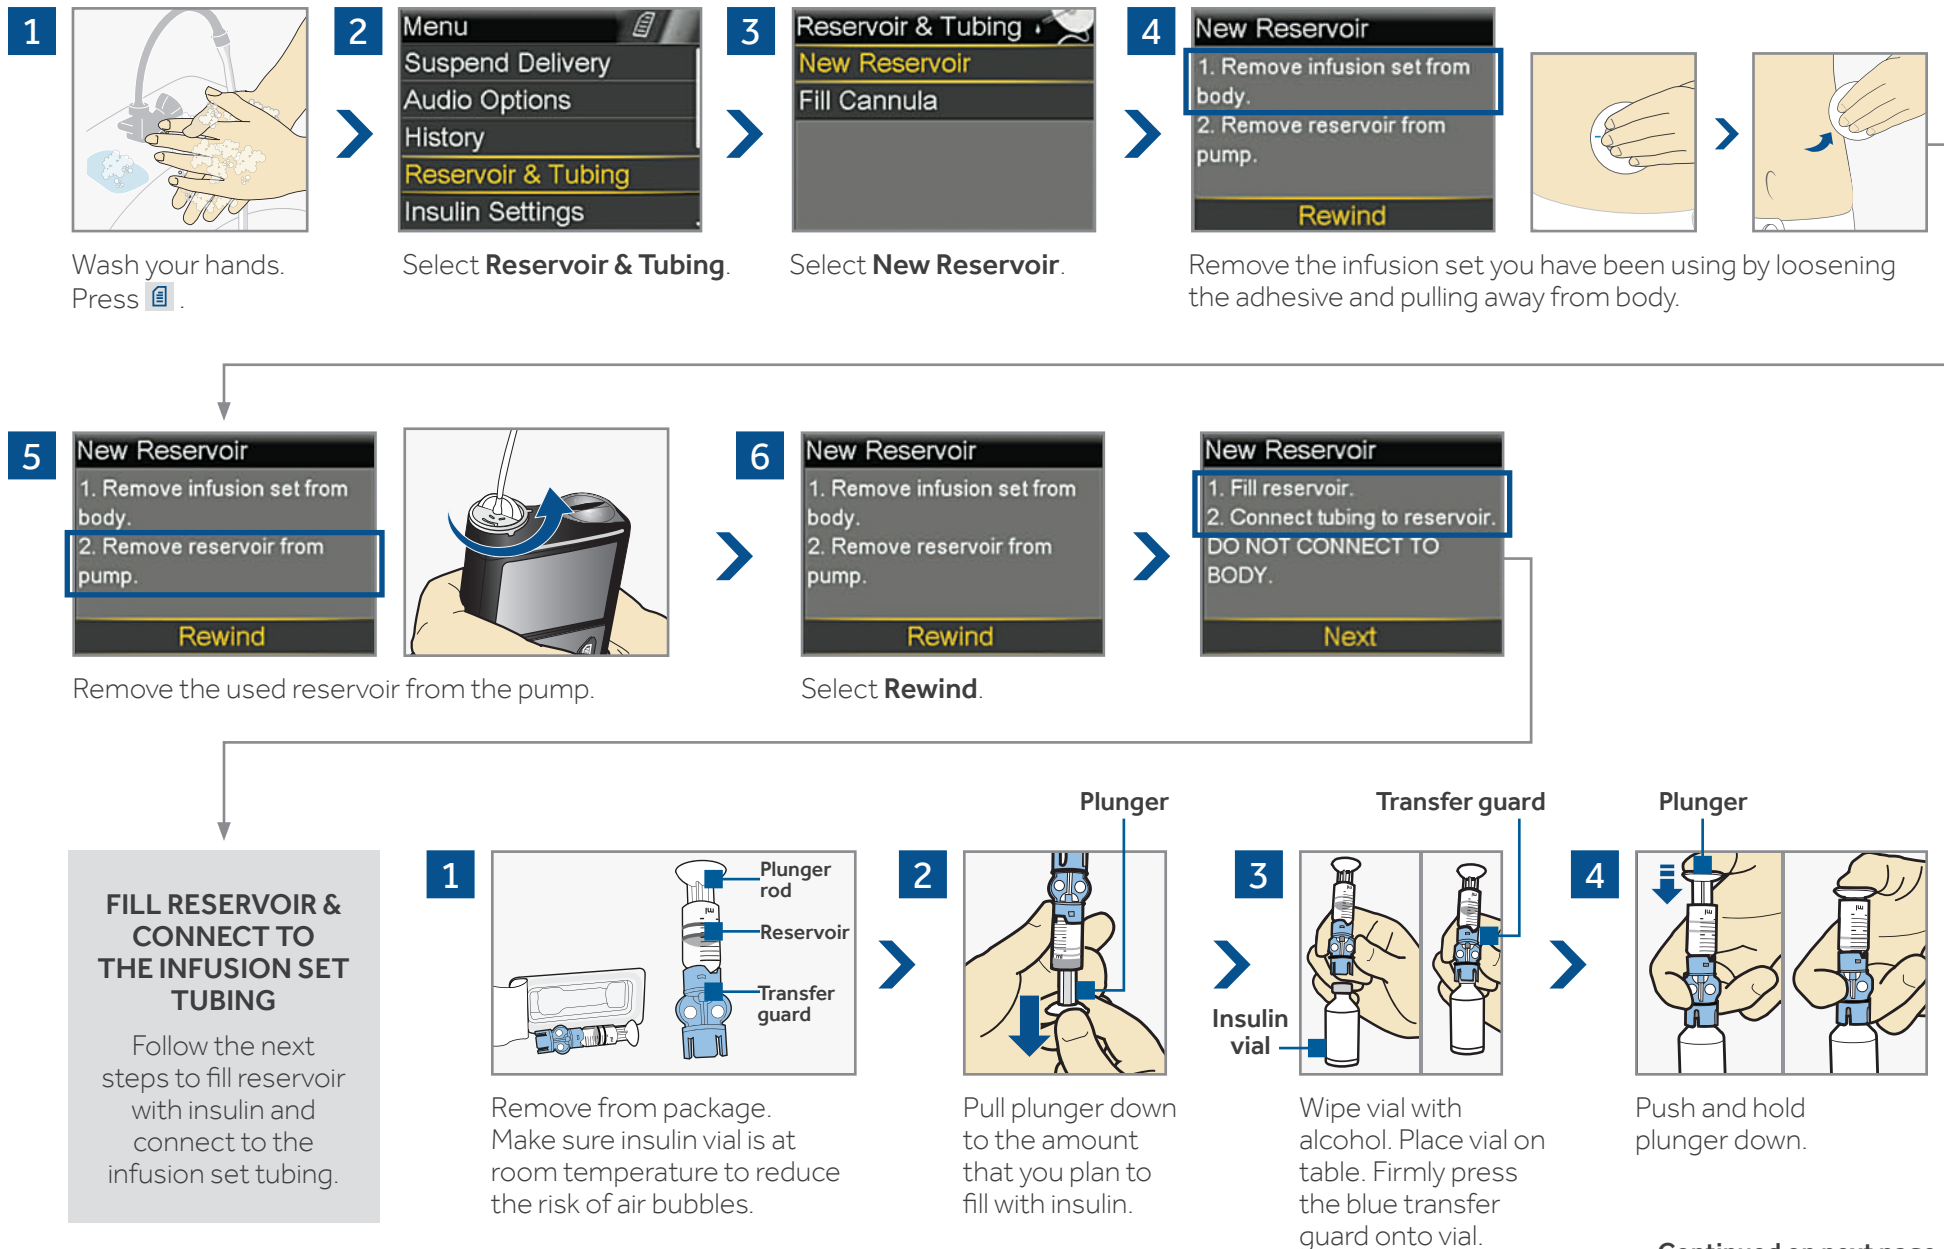

Continued on next page



# CHANGING THE SURE-T® INFUSION SET: MINIMED® 630G INSULIN PUMP

**Warning:** Do not use the reservoir or infusion set if any liquid gets on the top of the reservoir or inside the tubing connector. Liquid can temporarily block the vents and may result in the delivery of too little or too much insulin, which can cause hypoglycemia or hyperglycemia.

**5**

Insulin vial  
Plunger

With your thumb still on the plunger, flip over so vial is on top. Release thumb and pull plunger down to fill with insulin.

**6**

Tap the reservoir to move air bubbles to top of reservoir. Push plunger up to move air into vial.

**7**

If needed, pull plunger back down to amount of insulin needed for 2-3 days.

**8**

Reservoir  
Transfer guard

To avoid getting insulin on the top of the reservoir, turn vial over so it is upright. Hold transfer guard and turn reservoir counter-clockwise and remove from transfer guard.

**CONNECT RESERVOIR TO INFUSION SET**

You will place the tubing connector onto the end of the infusion set to the filled reservoir.

**1**

Set connector  
Set release  
Tubing connector  
Sure-T® insertion piece

Remove the infusion set from package.

**2**

Press the edges of the set release connector. With the other hand, pull the cap off.

**3**

Slide the set release connector into the set connector.

**Connector**

**4**

Gently push the tubing connector onto reservoir. Turn clockwise until locked. You will hear a click.

**5**

If you see air bubbles, tap reservoir to move them to top. Push plunger just a bit to move them into tubing.

**6**

Plunger

Twist plunger counter-clockwise to loosen and remove.


Continued on next page



# CHANGING THE SURE-T® INFUSION SET: MINIMED® 630G INSULIN PUMP

## THE BACKLIGHT MAY HAVE TURNED OFF

Press any button to turn the screen back on.

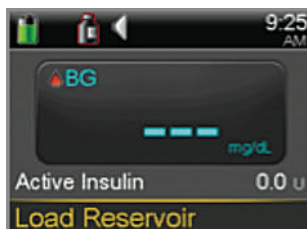



Select **Load Reservoir** and unlock pump if necessary.




Select **Next**.

## PLACE RESERVOIR INTO PUMP


Now place the filled reservoir into the reservoir compartment of the pump.

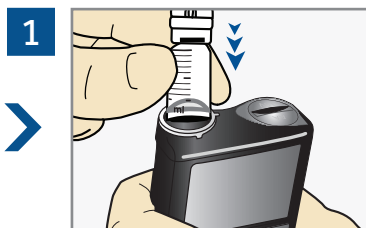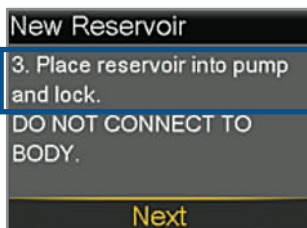

Place reservoir into pump.

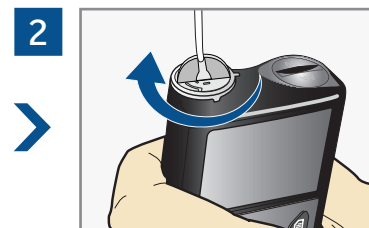

Turn clockwise until you feel reservoir lock into place.

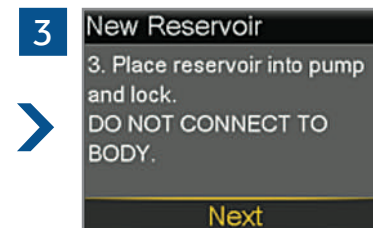


Select **Next**.

## LOAD RESERVOIR AND FILL TUBING


Follow these steps to load the reservoir and fill the tubing.




Select **Load** and keep holding .

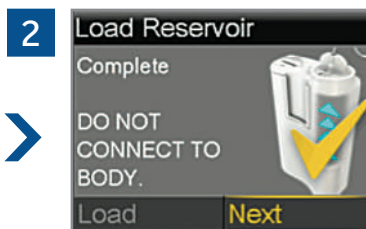


When you see this screen, select **Next**.

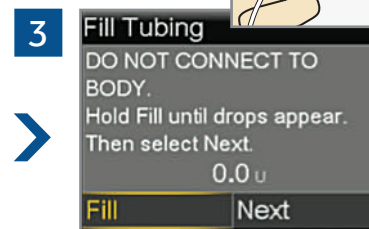

Select **Fill** and keep holding until you see drops at the end of tubing, then let go.

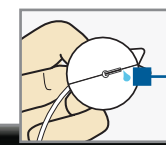

Drops at end of tubing

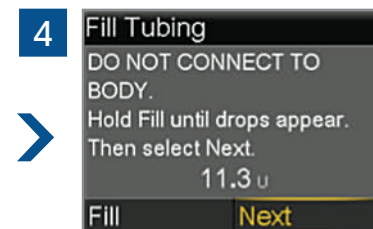

After you see drops, press and select **Next**.



Continued on next page




# CHANGING THE SURE-T® INFUSION SET: MINIMED® 630G INSULIN PUMP

## INSERT INFUSION SET


Next, follow the steps to insert the infusion set into your body.

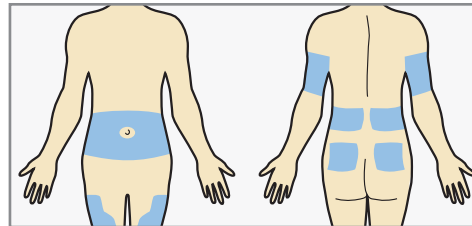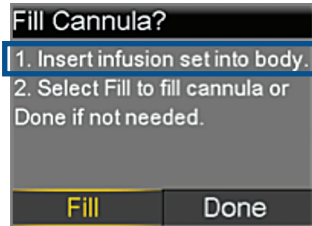


Choose an insertion site from the shaded areas shown here. Wipe with alcohol or other antiseptic.

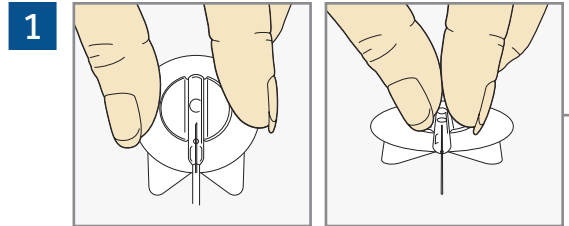


Hold infusion set insertion piece by flipping the plastic wings upwards and pressing them together.

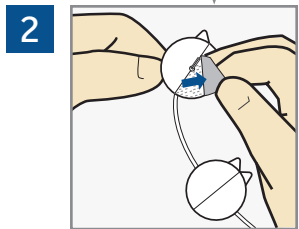


Peel off both pieces of the paper backing from the insertion piece.

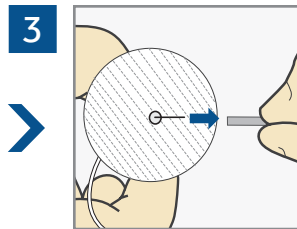


Pull off the needle guard.

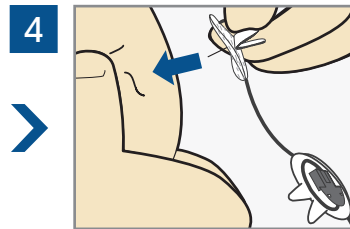

With one hand, pinch up skin at prepared site. With the other hand, insert the needle straight in at a 90 degree angle.

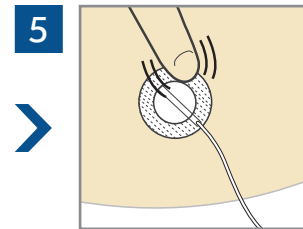


Press adhesive securely to skin.

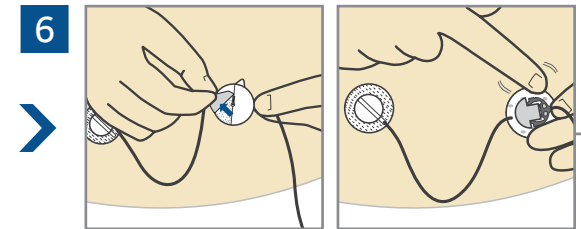


Remove paper backing from the set connector and secure adhesive to skin. Be sure to place it on an area of your body that allows for easy disconnecting from tubing.

## COMPLETE THE INFUSION SET CHANGE

Use the pump to finish the process.

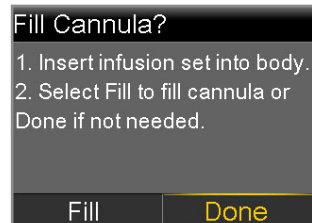

You do not need to fill a cannula. Press  and select **Done**.

**YOUR  
INFUSION SET  
CHANGE  
IS NOW  
COMPLETE!**